

### Sierra Series

BOLT-UP STEEL BUILDINGS

# No welding. No sweat.

It's really that simple.

- Multiple Sizes.
- · Choose your colors.
- · Package delivers in days.
- · Build it quick.
- Install with simple tools.

Detailed instructions and **step-by-step videos** online at safewaysteel.com




## If you can use a wrench, you can build Sierra<sup>™</sup> Series!

Seriously...it's that simple.

Just follow our step-by-step instructions using wrenches, ladders and screw guns and you can have a new building in just a few days.



Engineered cees and zees **bolt together** with solid steel plates to give Sierra<sup>™</sup> Series its strength.

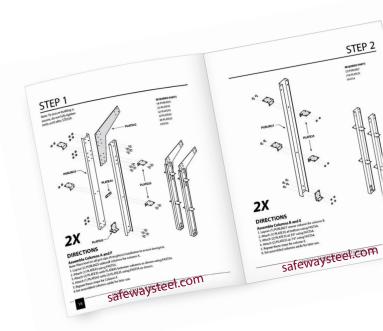




Adding **zee girts** between the columns make the walls strong.

#### **DAY 1:**

- Assemble columns approx. 4 hours
- Stand columns approx. 1 hour
- Attach zee girts approx. 3 hours
- Assemble rafters approx. 2 hours

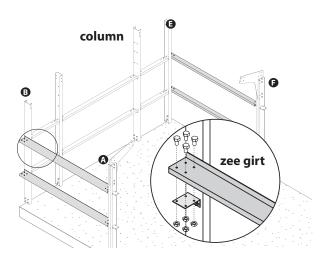




A group of friends and a few **ladders** make raising the center rafters quick.

### DAY 2:

- Raise and install rafters approx. 3 hours
- Install roof purlins approx. 2 hours

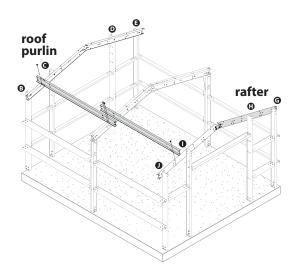




All you need is a **power drill** to attach the roof and wall panels.

#### **DAY 3:**

- Install siding approx. 2 hours
- Install roofing approx. 2 hours
- Install trim approx. 2 hours

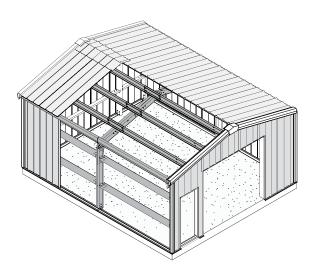



### Step-by-step instructional videos online

We've got 46 instructional videos that will help guide you every step of the way. You can do it!

Check them out online at **safewaysteel.com** 

#### **Planning:** Check local zoning regulations Obtain a building permit, if required Plan and grade site ☐ Frame and pour concrete foundation with embedded anchor bolts, concrete foundation specialist recommended Required tools: ☐ PPE (safety glasses, hard hat, gloves) ☐ Socket w/ratchet, 1" and ¾" ☐ Nut driver, 1/4" and 5/16" ☐ Open/closed end wrench, ¾" ☐ Power drill □ Ladder(s) ☐ Ratchet straps, 3" x 30' ■ Metal snips/shear ☐ Level, 4' magnetic ☐ Sledgehammer, small 3lbs ☐ Three good friends + beverages Make your life easier: These items are not required, but can make installation easier or quicker. ☐ Crescent spud wrench, ¾" ☐ Impact driver/hammer drill ☐ Turbo shear for cutting panels Scaffolding, scissor lift, or tractor for raising roof purlin

Ask your dealer for a price today! 1-800-547-8335